

Table of Contents

•	SAFETY INSTRUCTIONS	. PAGE 4
•	PREPARATION	. PAGE 5
•	HARDWARE LIST	. PAGE 6
•	HARDWARE ILLUSTRATION	. PAGE 8
•	PART / LIST ILLUSTRATION	PAGE 13
•	ASSEMBLY INSTRUCTIONS	PAGE 18
•	EXPLODED VIEW	PAGE 33
•	CONTACT PAGE	PAGE 34

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician.

Il est conseille de subir un examen medical complet avant d'entreprendre tout programme d'exercise. Si vous avez des etourdissements ou des faiblesses, arretez les exercices immediatement.

Antes de comenzar cualquier programma de ejercicios, deberias tener un examen fisico con su doctor.

When using exercise equipment, you should always take basic precautions, including the following:

- Read all instructions before using the S2SP. These instructions are written to ensure your safety and to protect the unit.
- O Do not remove any safety labels from the machine.
- O Do not allow children on or near the equipment.
- Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer. Such attachments might cause injuries.
- Wear proper exercise clothing and shoes for your workout, no loose clothing.
- Keep hands, limbs, loose clothing, and long hair well out of the way of all moving parts.
- Use care when getting on or off the unit.
- O Do not overexert yourself or work to exhaustion.
- O If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- Never operate unit when it has been dropped or damaged. Return the equipment to a service center for examination and repair.
- Never drop or insert objects into any opening in the equipment.
- Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
- Do not use the equipment outdoors or near water.

Personal Safety During Assembly

- Before beginning assembly, please take the time to read the instructions thoroughly.
- O Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- Assemble and operate the **S2SP** on a solid, level surface. Locate the unit a few feet from the walls or furniture to provide easy access.

The **S2SP** is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with your Body-Solid **Shoulder Press Machine.**

After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call the dealer from whom you purchased the machine or call **1-800-556-3113** for the dealer nearest you.

Obtaining Service

Please use this Owner's Manual to make sure that all parts have been included in your shipment. When ordering parts, you must use the part number and description from this Owner's Manual. Use only Body-Solid replacement parts when servicing this machine. Failure to do so will void your warranty and could result in personal injury.

For information about product operation or service, check out the official Body-Solid website at www.bodysolid.com or contact an authorized Body-Solid dealer or a Body-Solid factory-authorized service company or contact Body-Solid customer service at one of the following:

Toll Free:	1-800-556-3113
Phone:	1-708-427-3555
Fax:	1-708-427-3556
Hours:	M-F 8:30-5:00 CST
E-Mail:	service@bodysolid.com

Or write to: Body-Solid, Inc. Service Department 1900 S. Des Plaines Ave. Forest Park, IL 60130 USA

Retain this Owner's Manual for future reference. If you need to order replacement parts please be prepared to provide the following information when contacting us so that we can assist you better.

- **1. Model Number**
- 2. Place of Purchase
- 3. Serial Number (S/N)
- 4. Part # and Description

Preparation

Thank you for purchasing the **S2SP**. This bench is part of the Body-Solid line of quality strength training machines, which lets you target specific muscle groups to achieve better muscle tone and overall body conditioning. To maximize your use of the equipment please study this Owner's Manual thoroughly.

Required Tools

The basic tools that you must obtain before assembling the **S2SP** include but are not limited to:

- O Metric Allen Key Set
- O Standard Allen Key Set
- Standard Wrench Set
- O Metric Wrench Set
- Adjustable Wrench
- O Screwdriver (standard and/or phillips)

Installation Requirements

Follow these installation requirements when assembling the **S2SP**:

Set up the **S2SP** on a solid, flat surface. A smooth, flat surface under the machine helps keep it level. A level machine has fewer malfunctions.

Provide ample space around the machine. Open space around the machine allows for easier access.

Insert all bolts in the same direction. For aesthetic purposes, insert all bolts in the same direction unless specified (in text or illustrations) to do otherwise.

Leave room for adjustments. Tighten fasteners such as bolts, nuts, and screws so the unit is stable, but leave room for adjustments. Do not fully tighten fasteners until instructed in the assembly steps to do so.

Fill out and mail the warranty card.


Assembly Tips

Read all "Notes" on each page before beginning each step.

While you may be able to assemble the **S2SP** using the illustrations only, important safety notes and other tips are included in the text.

Some pieces may have extra holes that you will not use. Use only those holes indicated in the instructions and illustrations.

- **NOTE:** With so many assembled parts, proper alignment and adjustment is critical. While tightening the nuts and bolts, be sure to leave room for adjustments.
- **NOTE:** The bottles that are marked "Poison" is your touch up paint. Keep away from children.
- **CAUTION:** Obtain assistance! If you feel like you can't assemble the **S2SP** by yourself then do not attempt to do so as this could result in injury. Review the installation requirements before proceeding with the following steps.

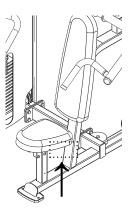

Your S/N# can be found here


Body-Solid continually seeks ways to improve the performance, specifications and product manuals in order to ensure that only superior products are released from our factories. Please take the time to carefully read through this manual thoroughly. Instructions contained in this document are not intended to cover all details or variations possible with Body-Solid equipment, or to cover every contingency that may be met in conjunction with installation, operation, maintenance or troubleshooting of the equipment. Even though we have prepared this manual with extreme care, neither the publisher nor the author can accept responsibility for any errors in, or omission from, the information given. Should additional information be required, or should situations arise that are not covered by this manual, the matter should be directed to your local Body-Solid representative, or the Service Department at Body-Solid Inc. in Forest Park, Illinois.


S2SP Hardware List


Part#	Size	Description	Quantity
1	M10X25mm	FLAT HEAD CAP SCREW	2 PCS.
2	M10X35mm	HEX HEAD BOLT	1 PCS.
3	M10X45mm	HEX HEAD BOLT	1 PCS.
4	M10X50mm	HEX HEAD BOLT	8 PCS.
5	M12X35mm	HEX HEAD BOLT	8 PCS.
6	M10X30mm	HEX HEAD BOLT	3 PCS.
7	M8X20mm	SOCKET HEAD CAP SCREW	1 PCS.
8	M4X8mm	SET SCREW	1 PCS.
9	M8X8mm	SET SCREW	4 PCS.
10	M6X16mm	PHILLIPS HEAD SCREW	3 PCS.
11	M5X16mm	FLAT PHILLIPS HEAD SCREW	2 PCS.
12	M6X40mm	BUTTON HEAD CAP SCREW	1 PCS.
13	M8X25mm	BUTTON HEAD CAP SCREW	4 PCS.
14	3/8"X2.0"	SOCKET HEAD CAP SCREW	1 PCS.
15	10-32X1/8"	SET SCREW	8 PCS.
40	M16	FLANGE NUT	1 PCS.
41	M10	NYLON LOCK NUT	8 PCS.
42	M12	NYLON LOCK NUT	8 PCS.
43	M6	NYLON LOCK NUT	1 PCS.
44	M8	NYLON LOCK NUT	4 PCS.
45	1/2"	HEXT NUT	1 PCS.
50	ø10mm	SPRING WASHER	5 PCS.
51	ø11xø20x2mm	FLAT WASHER	19 PCS.
52	ø13xø24x2.5mm	FLAT WASHER	16 PCS.
53	ø6.6xø12x1.6mm	n FLAT WASHER	3 PCS.


S2SP Hardware List


Part#	Size	Description	Quantity
54	ø9xø16x1.6mm	FLAT WASHER	8 PCS.
55	3/8"	SPRING WASHER	1 PCS.
56	1/2"	SPRING WASHER	1 PCS.

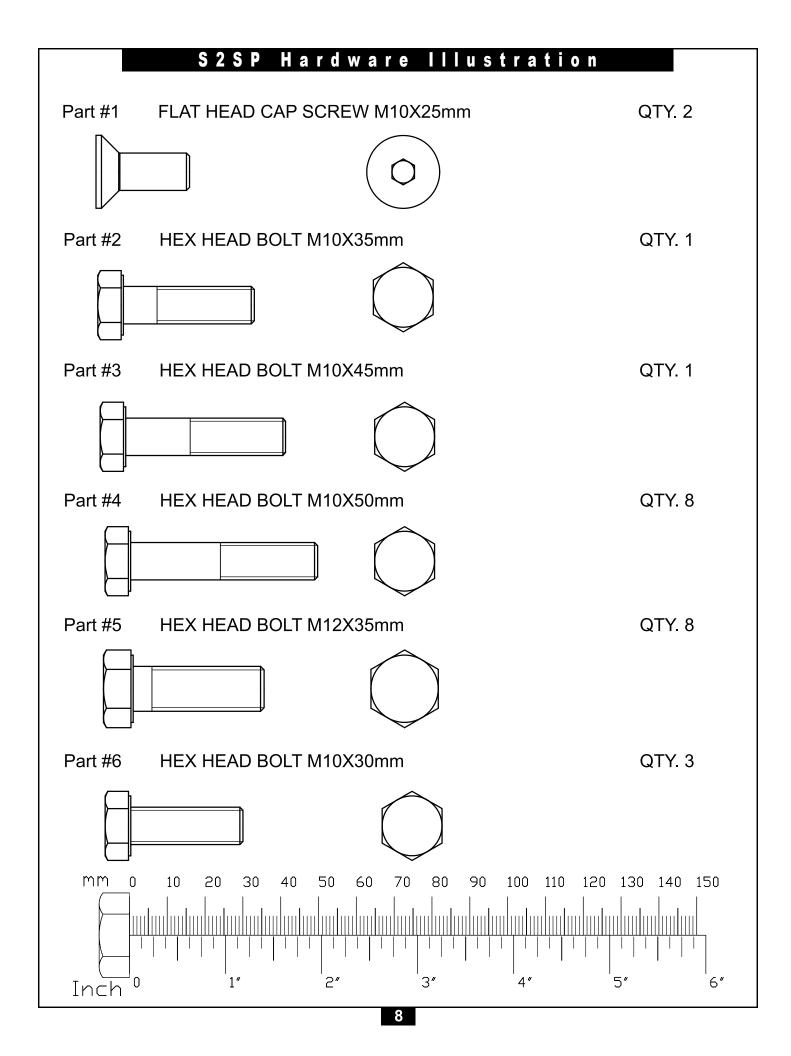

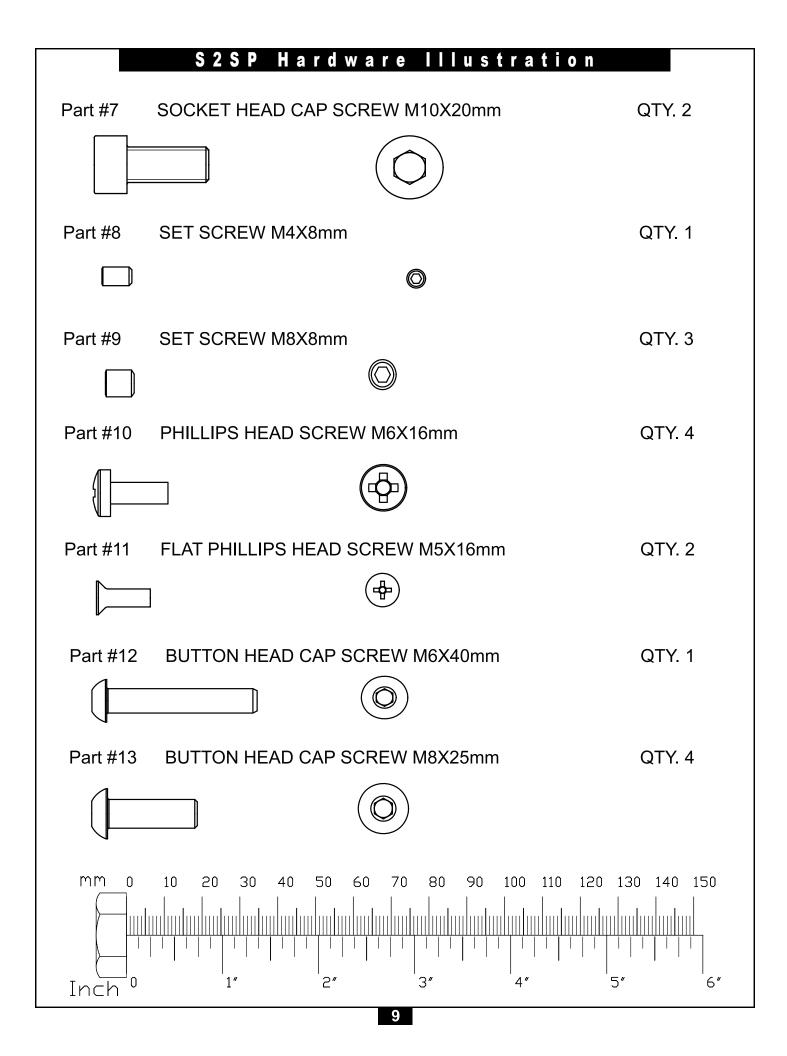

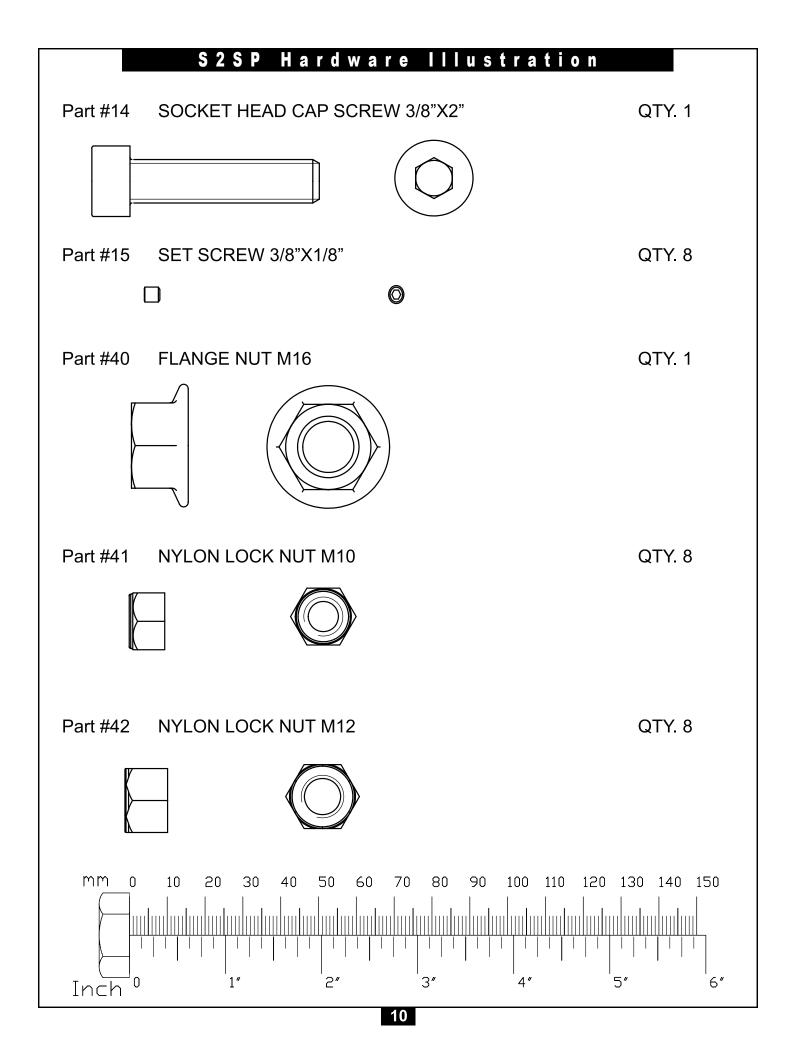


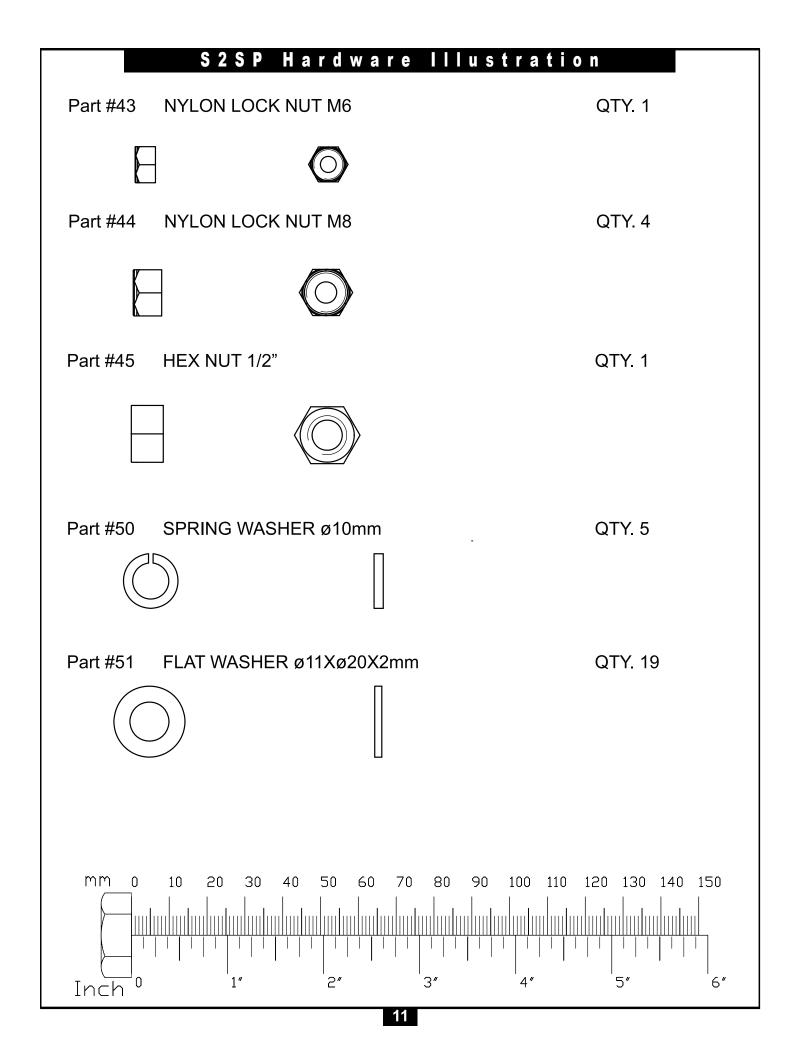

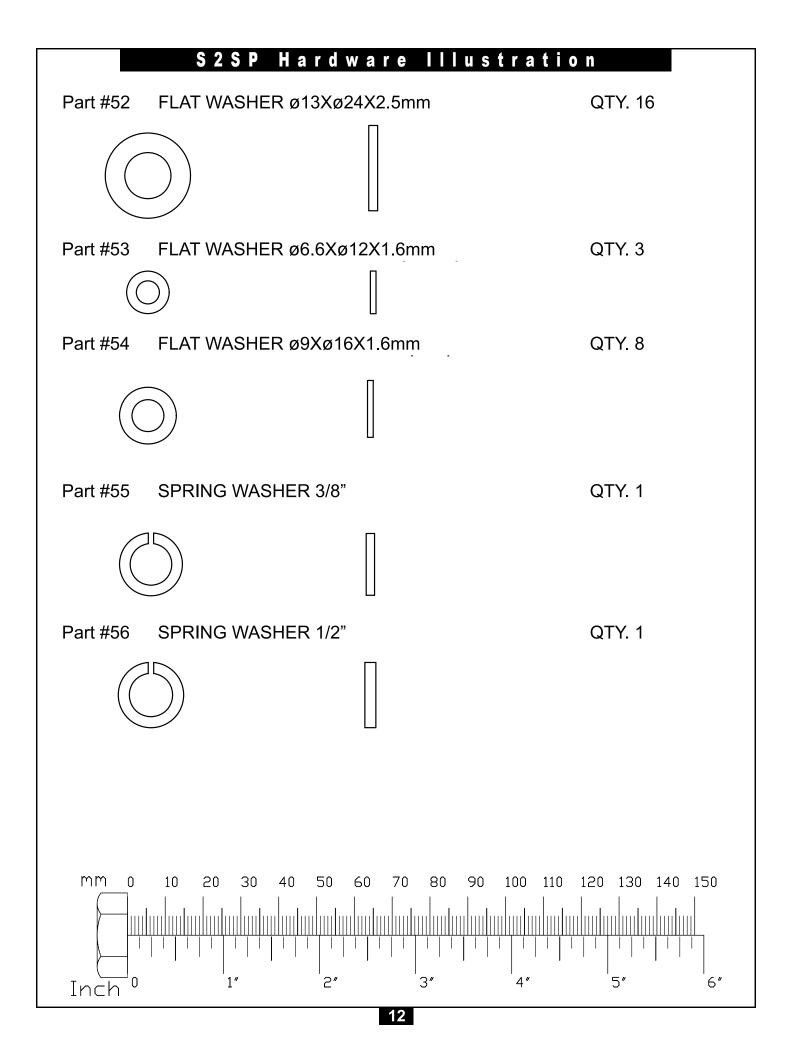


PART A-FRAME A, 1PC.


PART B-FRAME B, 1PC.

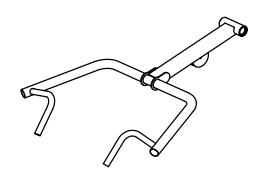


PART WA-WEIGHT STACK FRAME, 1PC.




PART WB-SHORT METAL SHROUD, 1PC. 1182mm



PART C-FRAME C, 1PC.

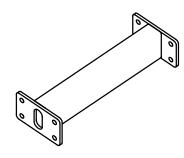


PART D-FRAME D, 1PC.

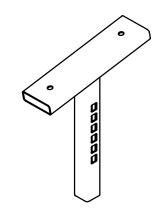

PART WC-LONG METAL SHROUD, 1PC.


1212mm




PART WD-CHROME GUIDE ROD, 2PCS.

ø19X1229mm

PART WE-FRONT SHROUD, 1PC.



PART WF-BACK SHROUD, 1PC.



PART WG-TOP SHROUD, 1PC.




PART #60-PLUG, 2PCS.



PART #61-BACK SEAT PAD, 1PC.




PART #62-TOP PLATE, 1PC.

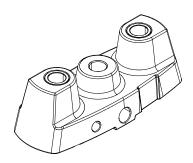


PART #63-SELECTOR ROD, 1PC.

0______


PART #64-SELECTOR ROD TOP BOLT, 1PC.




PART #65-QUICK CABLE LOCK, 1PC.




PART #66-ADJUSTMENT LEVER, 1PC.

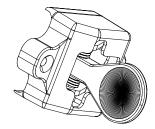


PART #67-SEAT PAD, 1PCS.




PART #68-FOOT PAD, 4PCS.

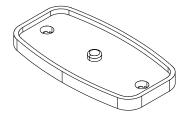



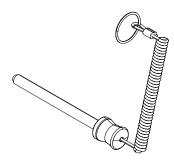


PART #70-BEARING, 2PCS.

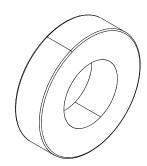

PART #71-BUSHING, 1PC.




PART #72-PLASTIC BUSHING, 2PCS.



PART #73-SHAFT, 1PC.

Ø25X178mm


PART #74-END CAP, 2PCS.

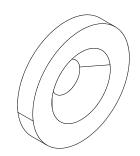


PART #79-SHAFT COLLAR, 2PCS.



PART #80-PLASTIC END CAP, 2PCS. 25X76mm

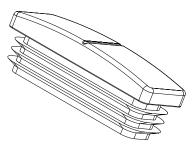


PART #77-RUBBER DONUT, 2PCS.

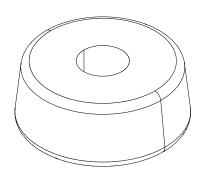


PART #78-HANDLE SLEEVE, 2PCS. PART #82-PULLEY, 6PCS.




PART #81-CABLE CONNECTOR, 1PC.

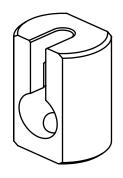

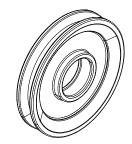


PART #83-ADJUSTMENT PAD, 1PC.

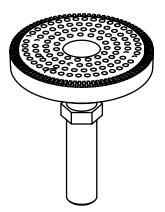

PART #84-HANDLE RING, 2PCS.



PART #84-HANDLE END CAP, 2PCS.

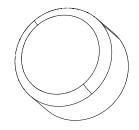

PART #93-CABLE, 1PC.

4550mm

STEP


Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware in this step. DO NOT wrench tighten unless instructed. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

1A. Attach Frame C (C) to Frame B (B) using:

- 4 (#5) M12X35mm Hex Head Bolt
- 8 (#52) 13X24mm Flat Washer
- 4 (#42) M12 Nylon Lock Nut

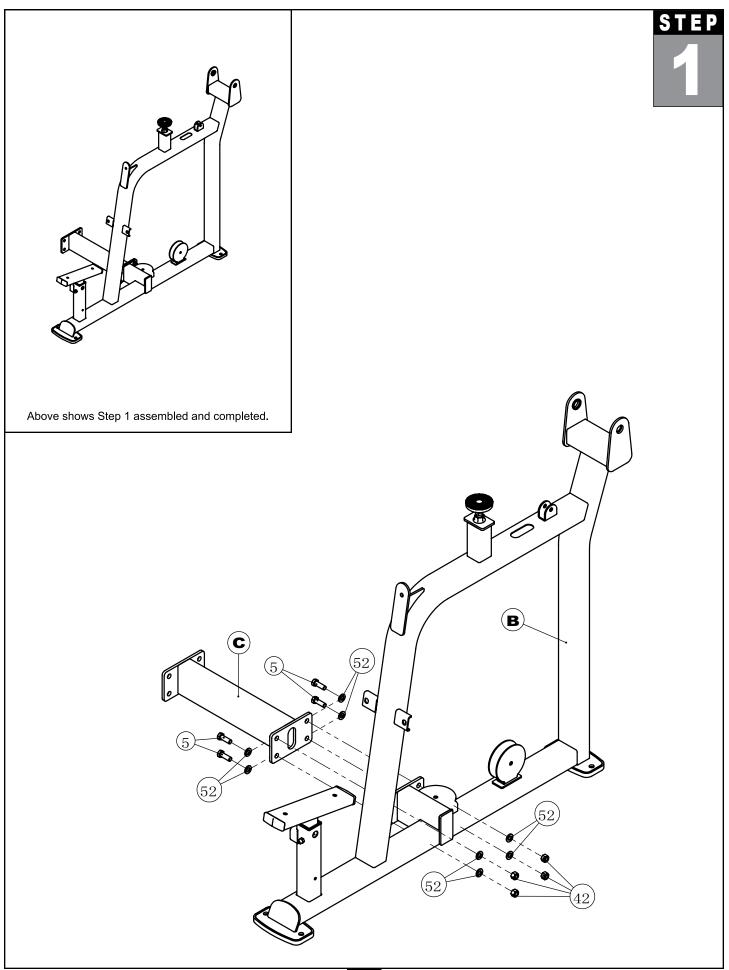


step 2

Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware in this step. DO NOT wrench tighten unless instructed. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- 2A. Attach Frame A (A) to Frame B (B) using:
 2 (#1) M10X25mm Flat Head Cap Screw
 1 (#73) 25mmX178mm Shaft Pin
 2 (#74) End Cap
- Note: 1) Please make sure the key slot of the Shaft Pin is aligned with the key slot hole of Frame B.
 - 2) The Shaft Pin is pre-assembled onto Frame B (B)

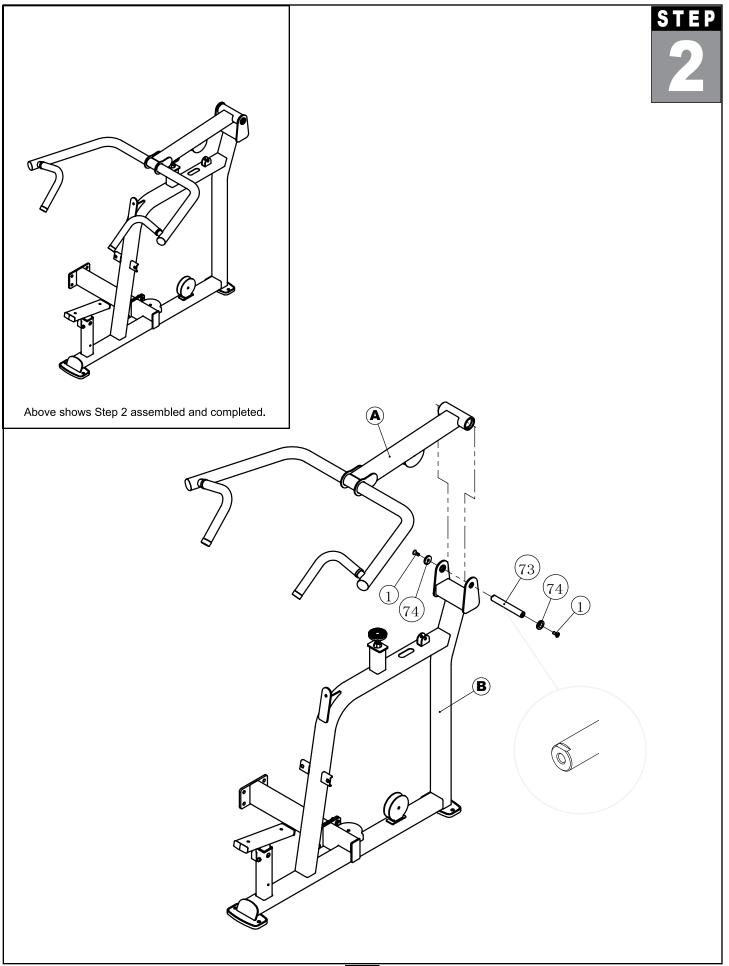


STEP 3

Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware first in this step. Wrench tighten ALL hardware at the end of STEP 3B. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- **3A.** Route Cable **(#92)** through Frame **C (C)** and Weight Stack Frame **(WA)** as showin in Step 3 drawing before connect the frames together.
- **3B.** Attach Frame C (C) to Weight Stack Frame (WA) using:
 - 4 (#5) M12X35mm Hex Head Bolt
 - 8 (#52) 11X20mm Flat Washer
 - 4 (#42) M12 Nylon Lock Nut

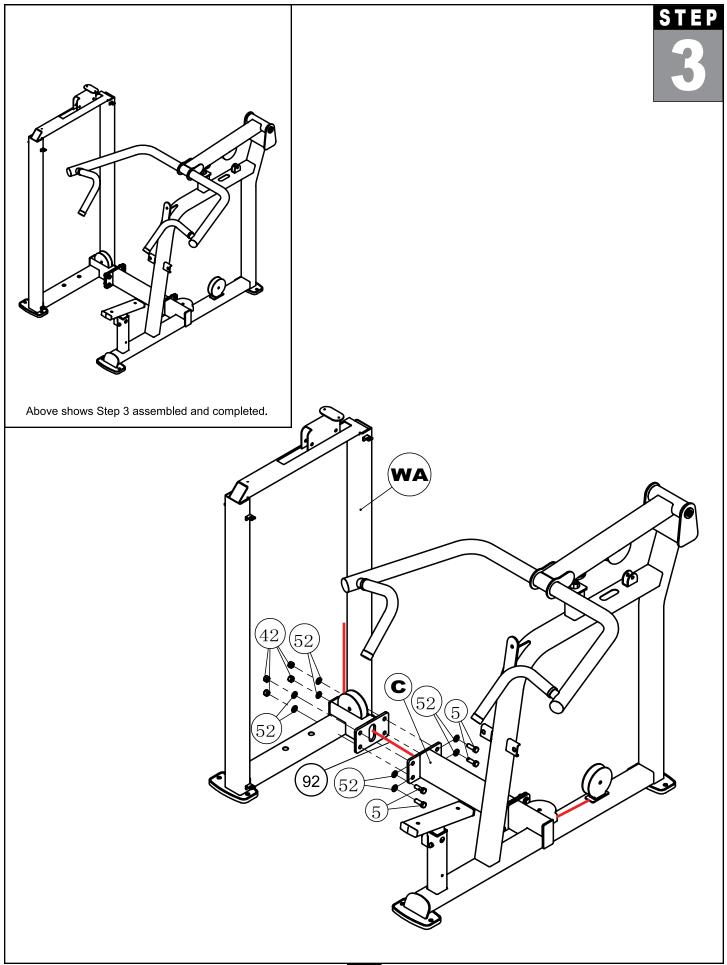

step 4

Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware first in this step. Wrench tighten ALL hardware at the end of STEP 4I. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.


4A. Install Chrome Guide Rods (WD) into the holes in the Weight Stack Frame (WA).

Note: Install the rod ends with side holes into the bottom section of the Weight Stack Frame

- **4B.** Install Rubber Donuts (**#77**) and slide to the bottom of the Guide Rods
- **4C.** Tilt Guide Rods **(WD)** away from the Weight Stack Frame **(WA)** and install 20pcs of weight plates **(#105)**. Be careful to hold guide rods steadily when installing weight plates.

Note: Please make sure the grooves of the weight plates are faced down during installation.

- **4D.** Install Top Plate & Selector Rod Assembly **(#14, #55, #62, #63)** onto the Guide Rods .
- **4E.** Install the Selector Rod Top Bolt (#64), the 1/2" Lock Nut (#45) and the 1/2" Spring Washer (#56) onto the Top Plate (#62).
- **4F.** Install Shaft Collars **(#79)** onto the Guide Rods so they are directly below the guide rod holes in the upper section of the Weight Stack Frame.
- **4G.** Slide Shaft Collars (**#79**) upward so they lock the guide rods into position by tightening the Set Screws (**#9**)
- **4I.** Install Weight Stack Pin (**#69**) using the key ring end through the Selector Rod Top Bolt (**#64**).

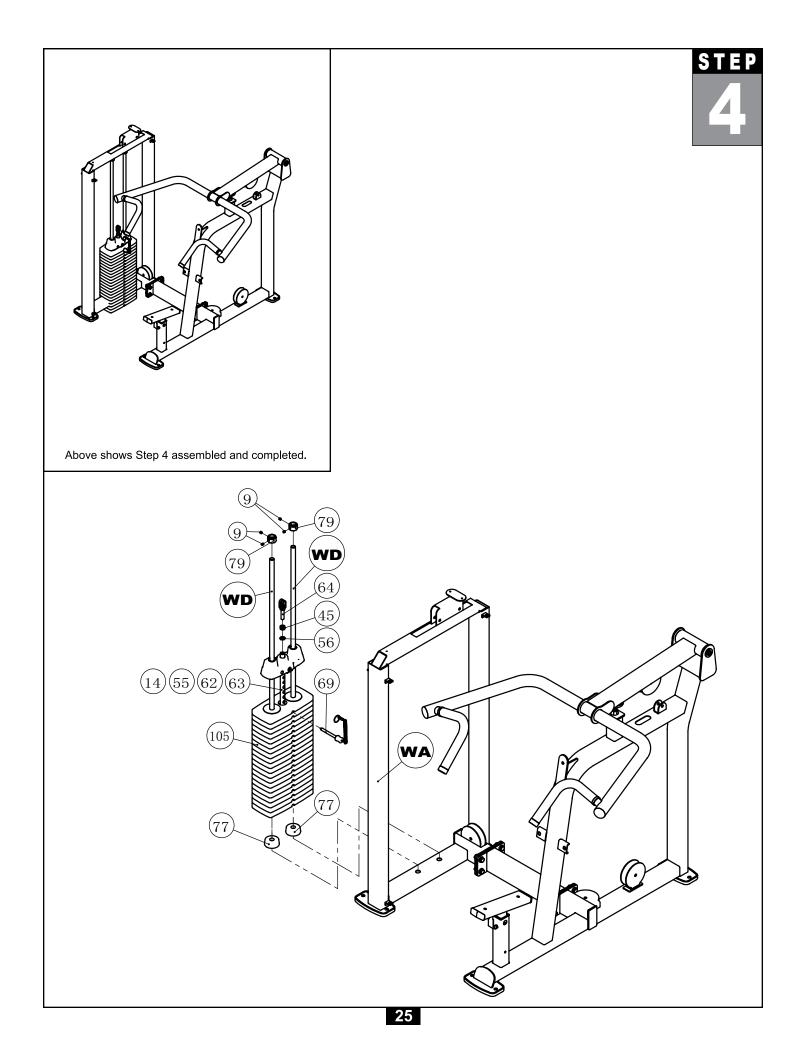

step 5

Be careful to assemble all components in the sequence they are presented.


NOTE:

Finger tighten all hardware first in this step. Wrench tighten ALL hardware at the end of STEP 5D. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- **5A.** Install Cable **(#93)** by first assembling the ball end into the Selector Rod Top Bolt **(#64)** and attaching the Cable Cylinder Lock **(#65)** over the ball end of the cable. Secure it by tighten in the Set Screw **(#8)**
- **5B.** Install the M10X35mm Hex Head Bolt **(#2)** through the slot hole of the Selector Rod Top Bolt **(#64)** by fastening the M10 Nylon Lock Nut **(#41)**.

5C. Route Cable (#93) while installing six Pulleys (#95) into frames as shown in Step 5 Drawing using
6 - (#4) M10X50mm Hex Head Bolt
12 - (#51) 11X20mm Flat Washer
6 - (#41) M10 Nylon Lock Nut

- 5D. Attach the end of the Cable (#107) to Cable Connector (#81)
- 5E. Attached Cable Connector (#81) to Frame A (A) using:
 - 1 (#3) M10X45mm Hex Head Bolt
 - 2 (#51) 11X20mm Flat Washer
 - 1 (#40) M10 Nylon Lock Nut
 - 1 (#71) Sleeve (Shrink Wrapped with #81)

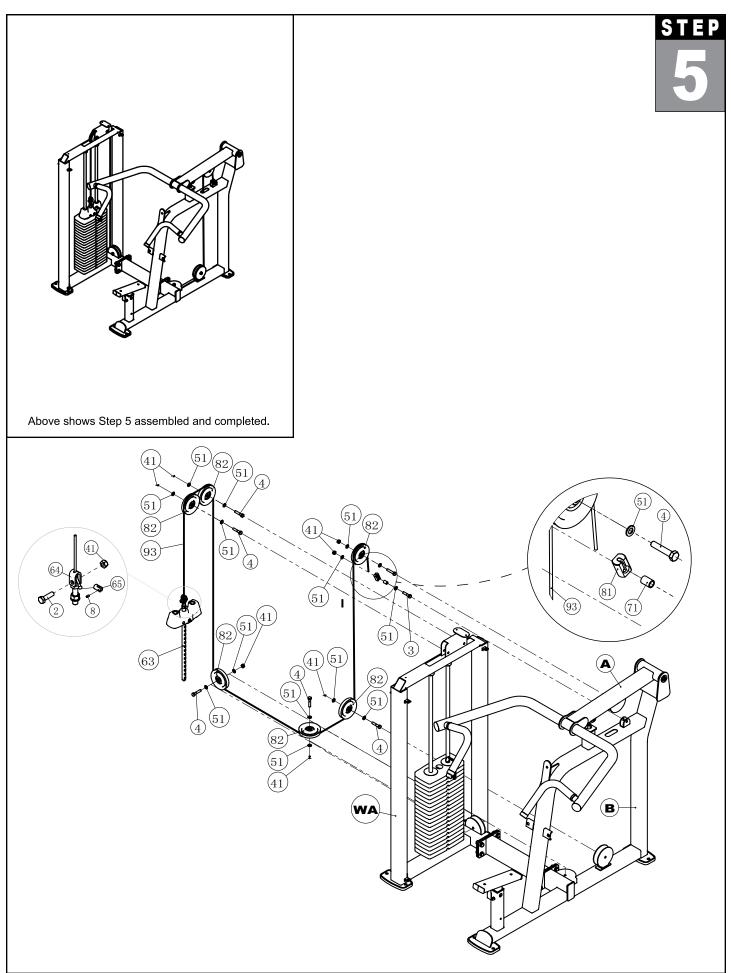




Be careful to assemble all components in the sequence they are presented.

NOTE:

Wrench tighten ALL hardware at the end of Each Step. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- **6A.** Attach Short Metal Shrouds **(WB)** and Long Metal Shrouds **(WC)** to Weight Stack Frame **(WA)** using:
 - 4 (#13) M8X25mm Button Head Cap Screw
 - 8 (#54) 9mmX16mm Flat Washer
 - 4 (#44) M8 Nylon Lock Nut
- **6B.** Bend the Plastic Shrouds (WE & WF) and insert them to the side slots of the Metal Shrouds (WB & WC).
- 6C. Attach Top Shroud (WG) to Weight Stack Frame (WA) using:
 - 3 (#14) M6X16mm Phillips Head Screw
 - 3 (#53) 6.6mmX12mm Flat Washer

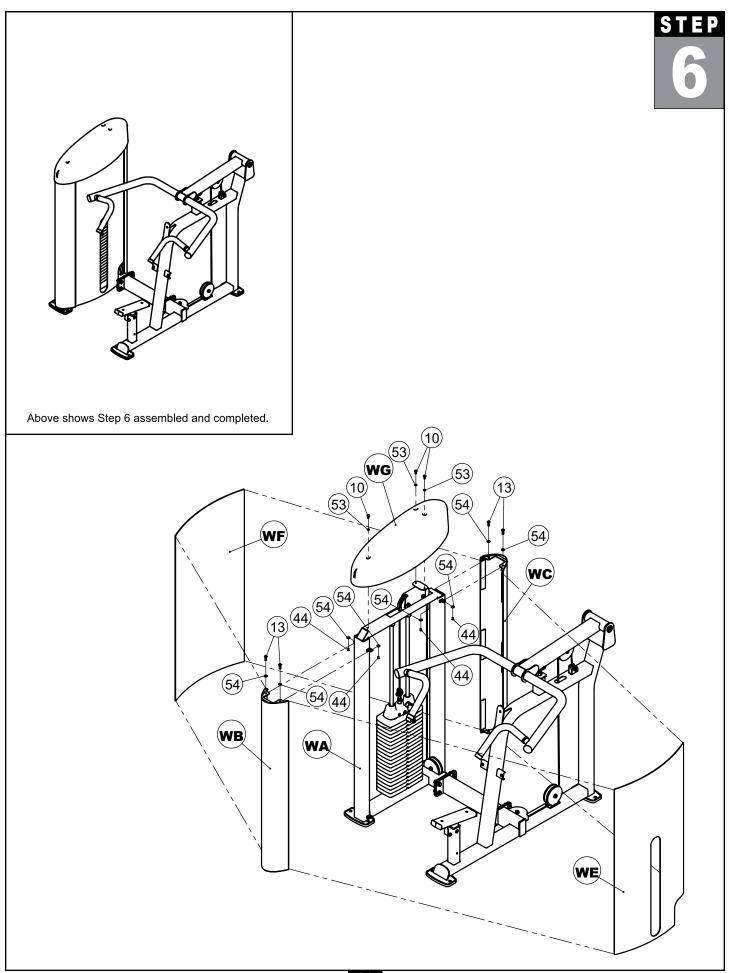



Be careful to assemble all components in the sequence they are presented.

NOTE:


Finger tighten all hardware first in this step. Wrench tighten ALL hardware at the end of STEP 7B. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.


7A. Attach Seat Pad (#67) to Seat Frame (D) using:

- 2 (#4) M10x50mm Hex Head Bolt
- 2 (#50) 10mm Spring Washer
- 2 (#51) 11mmX20mm Flat Washer


7B. Attach Back Pad (#61) to Frame B (B) using:

- 3 (#6) M10x30mm Hex Head Bolt
- 3 (#50) 10mm Spring Washer
- 3 (#51) 11mmX20mm Flat Washer

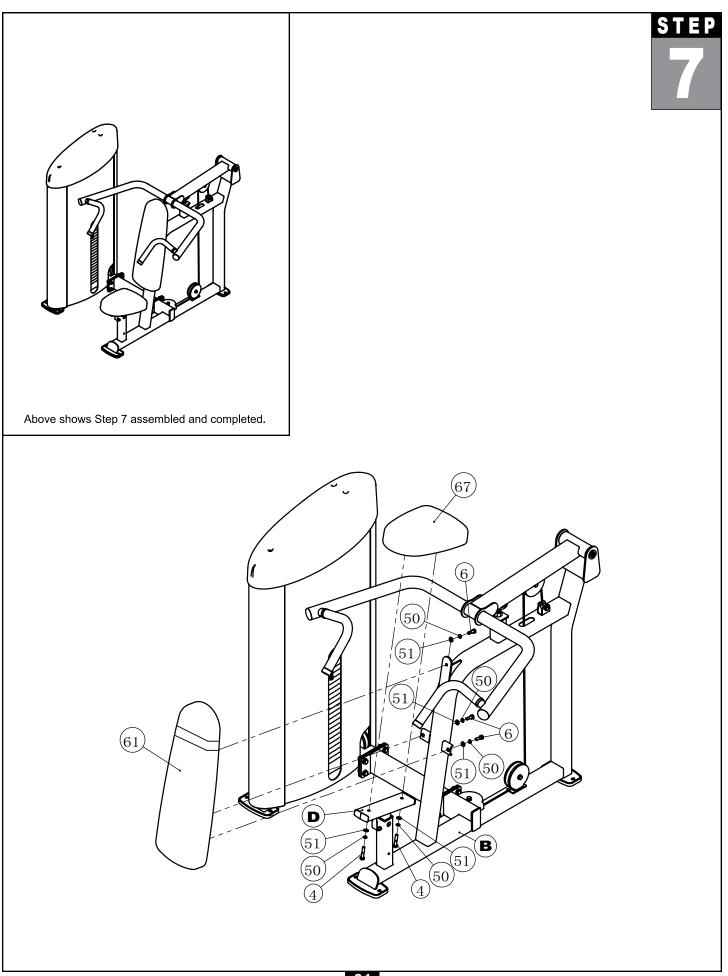

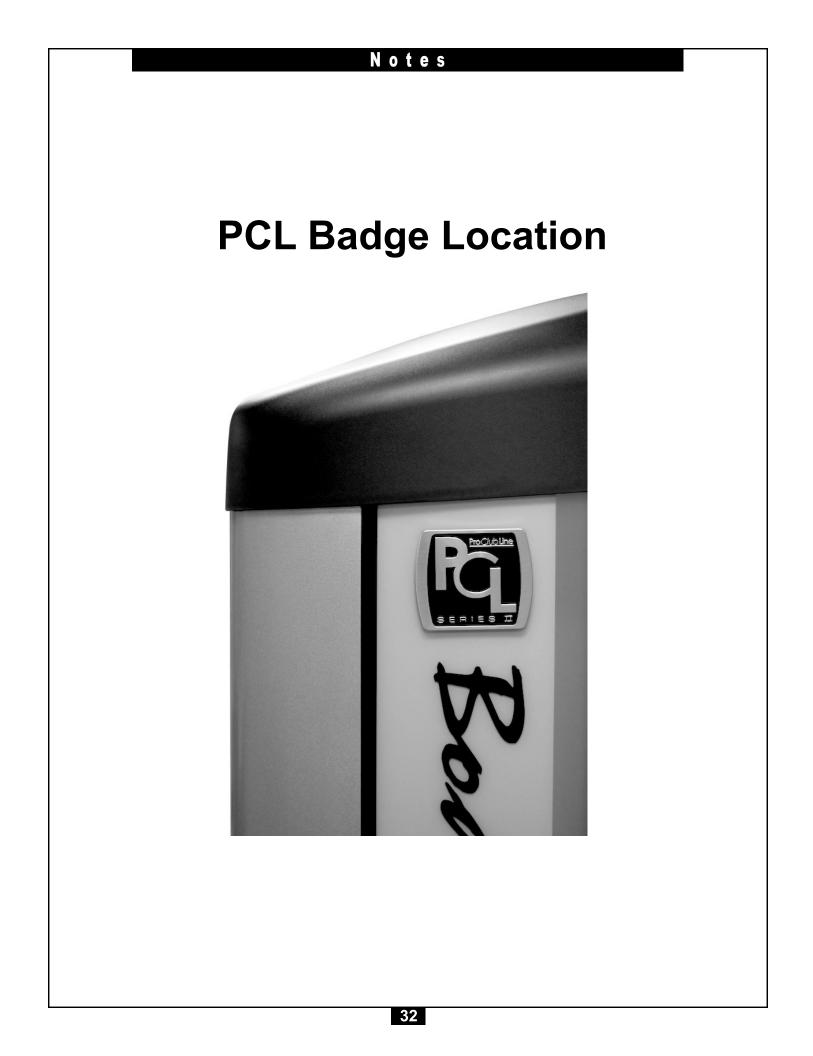

S2SP Exploded View

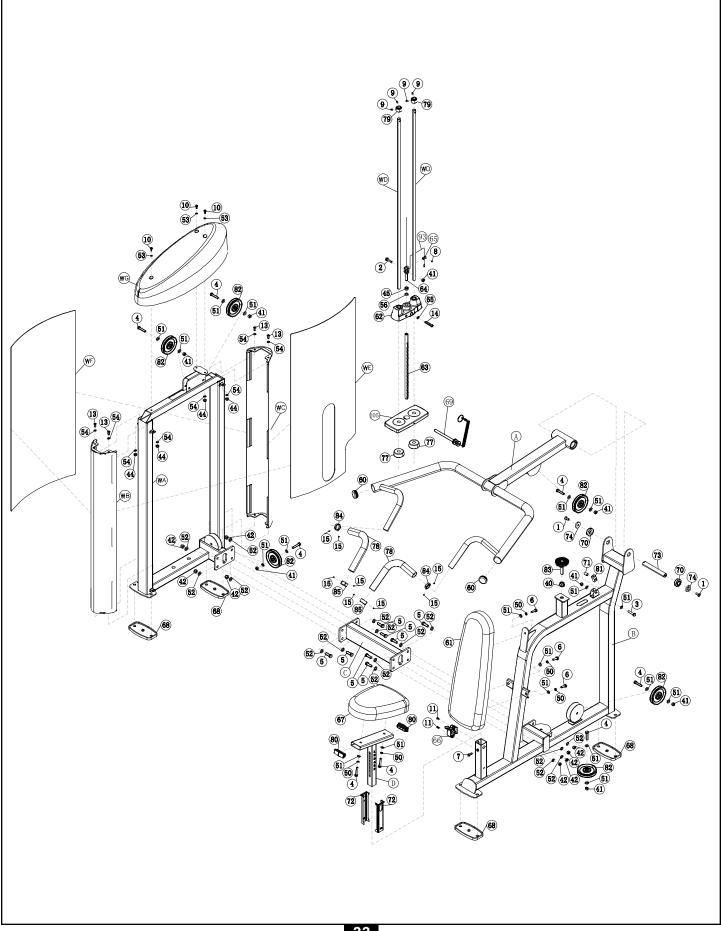

Body-Solid Built for Life

S2SP

PLEASE WRITE YOUR SERIAL NUMBER IN THE BOXES BELOW

S/N # 008212-00-00-00-00-00

1900 S. Des Plaines Ave. Forest Park, Il 60130 Phone:(708)427-3555 Fax:(708)427-3556 Hours: M-F 8:30 - 5:00 CST

www.bodysolid.com

Copyright 2009. Body-Solid. All rights reserved. Body-Solid reserves the right to change design and specifications when we feel it will improve the product. Body-Solid machines maintain several patented and patent pending features and designs. All rights reserved on all design patents and utility patents.