
Body-Solid® Built for Life

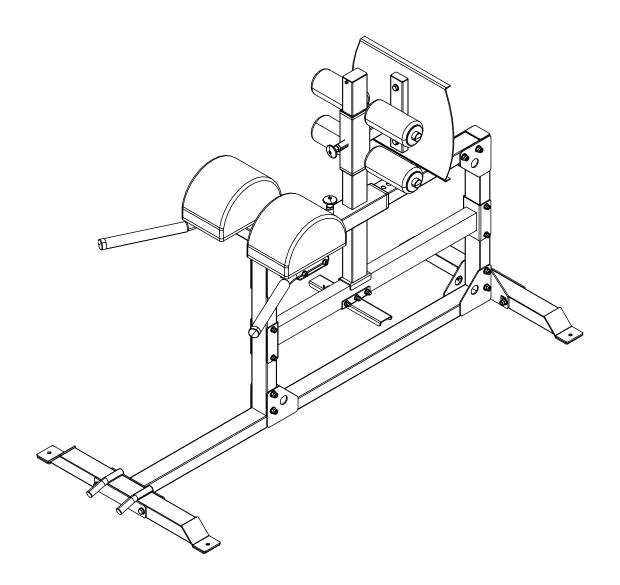

SGH500

Assembly Instructions

OWNER'S MANUAL

Warning, Safety & Maint

Be sure that all users carefully read and understand all warning, safety and maintenance labels on the machine before each use. Failure to do so may result in death or serious injury.

It is imperative that you retain this Owner's Manual and be sure all warning labels are legible and intact. Replacement Owner's Manuals and warning labels are available from your



eration, set up or III our customer service

THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. TO MINIMIZE RISK, YOU MUST FOLLOW THESE RULES:

- 1. Inspect equipment before each workout. Check that all nuts, bolts, screws and pop pins are in place and fully tightened. Also, before use, check cables for signs of wear. Replace all worn parts immediately. Never use machine if any parts are damaged or missing.
- FAILURE TO FOLLOW THESE RULES MAY RESULT IN SERIOUS INJURY.

 2. Keep clear of the cables and all moving parts when the machine is in use.

 3. Always make sure all Snap Links are closed when doing any cable/pulley/strap exercises. Exercise with care. Perform your exercises at a smooth moderate pace; never perform
- jerky or uncoordinated movements that may cause injury.
 It is recommended that you should workout with a training partner.
- Do not allow children or minors to play on or around this equipment.
- If unsure of proper use of equipment, call your local Body-Solid distributor or the Body-Solid customer service department at 1-800-556-3113.
- WARNING: Consult your physician before starting your exercise program. For your own safety, do not begin any exercise program without proper instruction. RAL8-6-03 WC-54

TO MINIMIZE RISK, YO

- 1. Inspect equipment befor are in place and fully tigh all worn parts immediate FAILURE TO FOLLOV
- Keep clear of the cables
- 3. Always make sure all Sn Exercise with care. Perfo jerky or uncoordinated n
- It is recommended that y 6. Do not allow children or If unsure of proper use o
- the Body-Solid customer WARNING: Consult your p safety, do not begin any

Safety and Maintenance of Cables

IMPORTANT: Cables are wear items. It is your responsibility to prevent unexpected breakage. Cable inspection should be performed daily. Inspect all cables, the nylon coating on all cables, and the area near the fitting at each end of each cable. Replace any damaged or worn cable immediately. Do not allow the machine to be used until damaged or worn cables are replaced. Using or allowing a machine to be used with a suspect cable can

For Body-Solid Customer Service Call 1-800-556-3113

information.

result in serious injury. See

olts, screws and pop pins s for signs of wear. Replace re damaged or missing IN SERIOUS INJURY. ne is in use.

:able/pulley/strap exercises. rate pace; never perform

rtner. pment. lid distributor or 3113. se program. For your own truction. RAL8-6-03 WC-54

	Check the function and integrity of the following components. As noted, Inspect equipment before each workout. Replace all damaged, broken or worn components immediately.						
	Cables:	Check tension, end fittings, and coating	V		ı		
		Check that locking nut at weight stack is tight		V	k		
ĺ	Upholstery : Wipe down and dry			7	П	W	
		Clean and condition	٧	٧	П	E	
	Frame:	Wipe down and dry	V		il	E	
		Polish / Wax	7.85	٧	41	K	
ĺ	Chrome:	Wipe down and dry	V	,	П	L	
		Polish / Lubricate		٧	4	Υ	
		s / Fasteners : Tighten ljust as needed		٧	li		
ĺ	Guide Rods	: Lubricate and clean		V	ı		
i	Linear Rod		V	il	٧		
	Seat Sleeve		V				
i	Adjustmen	ts / Locking Pins /		V	i !	٧	
	Tightening			M	П		
	Weight Sta	ck Pins		V	į.	٧	
	Warning In	struction Labels		V	П	V	
	Springs/Po	op Pins	V		Н	BVA.	
	Anti Skid Sı	urfaces		V		٧	
	Hand Grips			V	li	V	
	For Bo	dy-Solid Customer So 1-800-556-3	113	9	H	V	
	Coat	#MSSTKR0803 Sleeves: Lubricate and	cloon			V	
				+		V	
	Adjustments / Locking Pins / Tightening Knobs					٧	
	Weig			V			
	Warning Instruction Labels					V	
	Springs/Pop Pins						
	Anti :			V			
	Hand		10.1111	V			
	For Body-Solid Customer Service Call 1-800-556-3113 #MSSTKR0803						

Table of Contents

SAFETY INSTRUCTIONS	PAGE 4
• PREPARATION	PAGE 5
HARDWARE LIST	PAGE 6
HARDWARE ILLUSTRATION	PAGE 7
PART / LIST ILLUSTRATION	PAGE 9
ASSEMBLY INSTRUCTIONS	PAGE 12
• EXPLODED VIEW	PAGE 21
CONTACT PAGE	PAGE 22

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician.

Il est conseille de subir un examen medical complet avant d'entreprendre tout programme d'exercise. Si vous avez des etourdissements ou des faiblesses, arretez les exercices immediatement.

Antes de comenzar cualquier programma de ejercicios, deberias tener un examen fisico con su doctor.

When using exercise equipment, you should always take basic precautions, including the following:

- Read all instructions before using the SGH500.
 These instructions are written to ensure your safety and to protect the unit.
- Do not remove any safety labels from the machine.
- O Do not allow children on or near the equipment.
- O Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer. Such attachments might cause injuries.
- Wear proper exercise clothing and shoes for your workout, no loose clothing.
- Keep hands, limbs, loose clothing, and long hair well out of the way of all moving parts.
- O Use care when getting on or off the unit.
- O Do not overexert yourself or work to exhaustion.
- If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- Never operate unit when it has been dropped or damaged. Return the equipment to a service center for examination and repair.
- O Never drop or insert objects into any opening in the equipment.
- O Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
- Do not use the equipment outdoors or near water.

Personal Safety During Assembly

- Before beginning assembly, please take the time to read the instructions thoroughly.
- Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- Assemble and operate the SGH500 on a solid, level surface. Locate the unit a few feet from the walls or furniture to provide easy access.

The **SGH500** is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with your Body-Solid **Glute/Ham Machine**.

After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call the dealer from whom you purchased the machine or call **1-800-556-3113** for the dealer nearest you.

Obtaining Service

Please use this Owner's Manual to make sure that all parts have been included in your shipment. When ordering parts, you must use the part number and description from this Owner's Manual. Use only Body-Solid replacement parts when servicing this machine. Failure to do so will void your warranty and could result in personal injury.

For information about product operation or service, check out the official Body-Solid website at www.bodysolid.com or contact an authorized Body-Solid dealer or a Body-Solid factory-authorized service company or contact Body-Solid customer service at one of the following:

Toll Free: 1-800-556-3113
Phone: 1-708-427-3555
Fax: 1-708-427-3556
Hours: M-F 8:30-5:00 CST
E-Mail: service@bodysolid.com

Or write to: Body-Solid, Inc.

Service Department 1900 S. Des Plaines Ave. Forest Park, IL 60130 USA

Retain this Owner's Manual for future reference. If you need to order replacement parts please be prepared to provide the following information when contacting us so that we can assist you better.

- 1. Model Number
- 2. Place of Purchase
- 3. Serial Number (S/N)
- 4. Part # and Description

Preparation

Thank you for purchasing the **SGH500**. This bench is part of the Body-Solid line of quality strength training machines, which lets you target specific muscle groups to achieve better muscle tone and overall body conditioning. To maximize your use of the equipment please study this Owner's Manual thoroughly.

Required Tools

The basic tools that you must obtain before assembling the **SGH500** include but are not limited to:

- Metric Allen Key Set
- O Standard Allen Key Set
- Standard Wrench Set
- Metric Wrench Set
- Adjustable Wrench
- Screwdriver (standard and/or phillips)

Installation Requirements

Follow these installation requirements when assembling the **SGH500**:

Set up the **SGH500** on a solid, flat surface. A smooth, flat surface under the machine helps keep it level. A level machine has fewer malfunctions.

Provide ample space around the machine. Open space around the machine allows for easier access.

Insert all bolts in the same direction. For aesthetic purposes, insert all bolts in the same direction unless specified (in text or illustrations) to do otherwise.

Leave room for adjustments. Tighten fasteners such as bolts, nuts, and screws so the unit is stable, but leave room for adjustments. Do not fully tighten fasteners until instructed in the assembly steps to do so.

Fill out and mail the warranty card.

Assembly Tips

Read all "Notes" on each page before beginning each step.


While you may be able to assemble the **SGH500** using the illustrations only, important safety notes and other tips are included in the text.

Some pieces may have extra holes that you will not use. Use only those holes indicated in the instructions and illustrations.

NOTE: With so many assembled parts, proper alignment and adjustment is critical. While tightening the nuts and bolts, be sure to leave room for adjustments.

NOTE: The bottles that are marked "Poison" is your touch up paint. Keep away from children.

CAUTION: Obtain assistance! If you feel like you can't assemble the SGH500 by yourself then do not attempt to do so as this could result in injury. Review the installation requirements

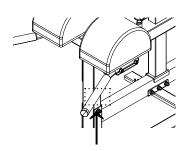


before proceeding with the following steps.

Your S/N# can be found here

Body-Solid continually seeks ways to improve the performance, specifications and product manuals in order to ensure that only superior products are released from our factories. Please take the time to carefully read through this manual thoroughly. Instructions contained in this document are not intended to cover all details or variations possible with Body-Solid equipment, or to cover every contingency that may be met in conjunction with installation, operation, maintenance or troubleshooting of the equipment. Even though we have prepared this manual with extreme care, neither the publisher nor the author can accept responsibility for any errors in, or omission from, the information given. Should additional information be required, or should situations arise that are not covered by this manual, the matter should be directed to your local Body-Solid representative, or the Service Department at Body-Solid Inc. in Forest Park. Illinois.

SGH500 Hardware List


Part#	Size	Description	Quantity	
1	M10X100mm	HEX HEAD BOLT	16 PCS.	
2	M10X75mm	HEX HEAD BOLT	3 PCS.	
3	M10X50mm	HEX HEAD BOLT	2 PCS.	
4	M10X55mm	SOCKET HEAD CAP SCREW	4 PCS.	
5	M8X20mm	HEX HEAD BOLT	4 PCS.	
6	M6X12mm	SOCKET HEAD CAP SCREW	1 PCS.	
7	M10	NYLON LOCK NUT	25 PCS.	
8	M10	FLAT WASHER	50 PCS.	
9	M8	FLAT WASHER	4 PCS.	
10	M8	SPRING WASHER	4 PCS.	
11	M6	SPRING WASHER	1 PCS.	

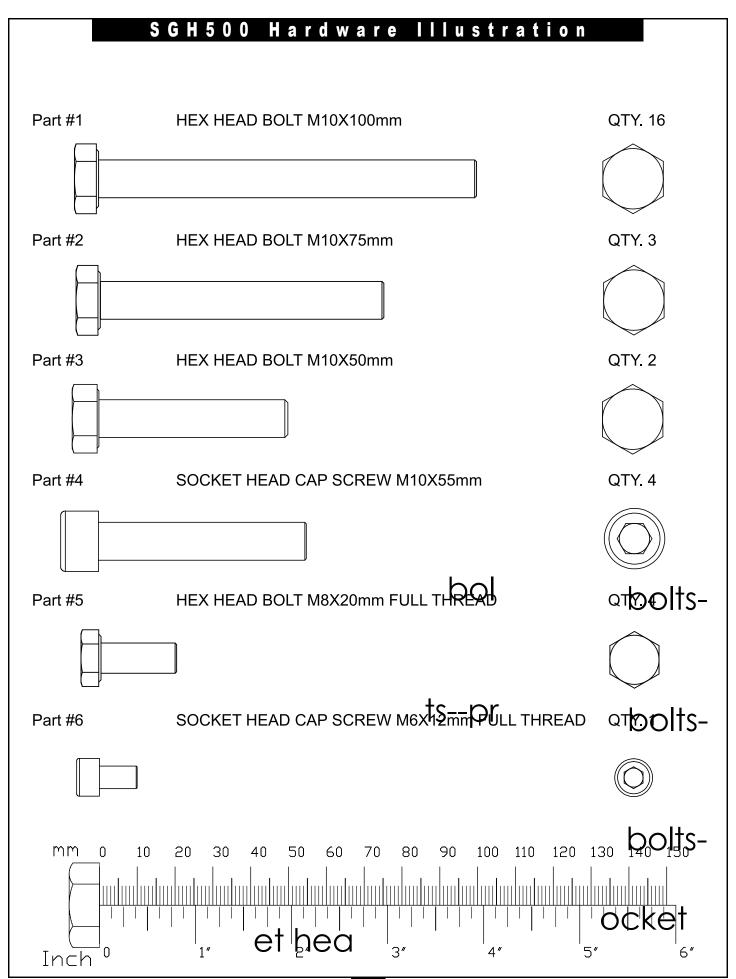


SGH500 Hardware Illustration Part #7 NYLON LOCK NUT M10 QTY, 25 Part #8 FLAT WASHER M10 QTY. 50 QTY. 4 Part #9 FLAT WASHER M8 QTY. 4 Part #10 SPRING WASHER M8 Presing Washer M6 Part #11 QTY, 1 b(G in was plain roduct 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 3"

SGH500 Parts List/Illustration


PART A -- FRAME A, 1 PCS

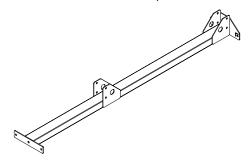


PART B -- FRAME B, 1 PCS

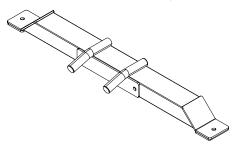


PART C -- FRAME C, 1 PCS

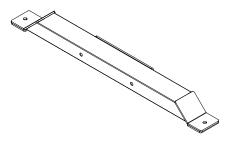


PART D -- FRAME D, 1 PCS

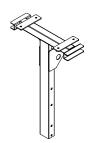


PART E -- LOWER CHROME GUIDE TUBE, 1 PCS

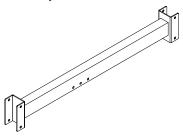


PART F -- FRAME F, 1 PCS

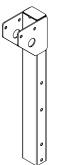


PART G -- UPPER CHROME GUIDE

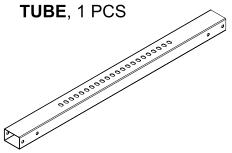


PART H -- FRAME H, 1 PCS

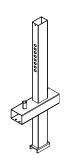

PART J -- FRAME J, 1 PCS

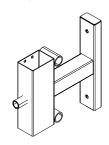


PART K -- STEEL BAR, 2 PCS

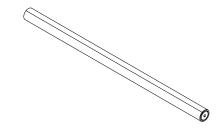


SGH500 Parts List/Illustration

PART L -- FOOT PLATE, 1 PCS

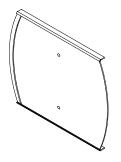


PART M -- RIGHT HANDLE BAR, 1 PCS PART #14 -- HANDLE BAR SLEEVE,

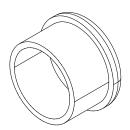


PART #13 -- HANDLE BAR END CAP ø32mm, 2 PCS

2 PCS

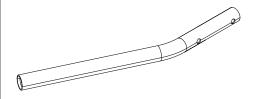

PART N -- LEFT HANDLE BAR, 1 PCS PART #15 -- KNEE PAD, 2 PCS

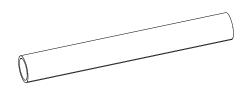





PART P -- STEP FRAME, 1 PCS




PART #16 -- TEFLON STRIP, 4 PCS

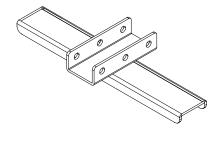

ø39mm, 2 PCS

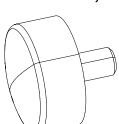


PART #12 -- HANDLE BAR END CAP PART #17 -- NYLON BUSHING **75X50mm**, 4 PCS

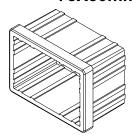


SGH500 Parts List/Illustration


PART #18 -- POP PIN, 2 PCS

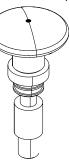


PART #19 -- END CAP ø32mm, 4 PCS

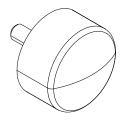

PART #20 -- END RING ø75mm, 4 PCS

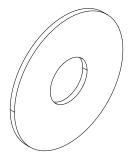

PART #21 -- FOAM ROLLER, 4 PCS

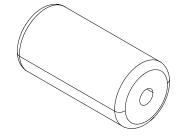



Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware in this step. DO NOT wrench tighten until the last step. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- **1A.** Attach Frame A (**A**) to Frame B (**B**) using:
 - 2 (#1) M10X100mm Hex Head Bolt
 - 4 (#8) M10 Flat Washer
 - 2 (#7) M10 Nylon Lock Nut
- **1B.** Attach Frame A (**A**) to Frame C (**C**) using:
 - 2 (#1) M10X100mm Hex Head Bolt
 - 4 (#8) M10 Flat Washer
 - 2 (#7) M10 Nylon Lock Nut

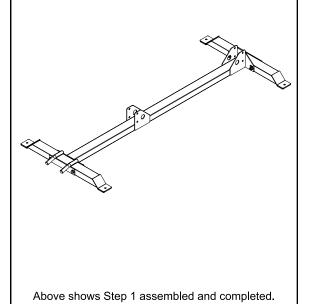

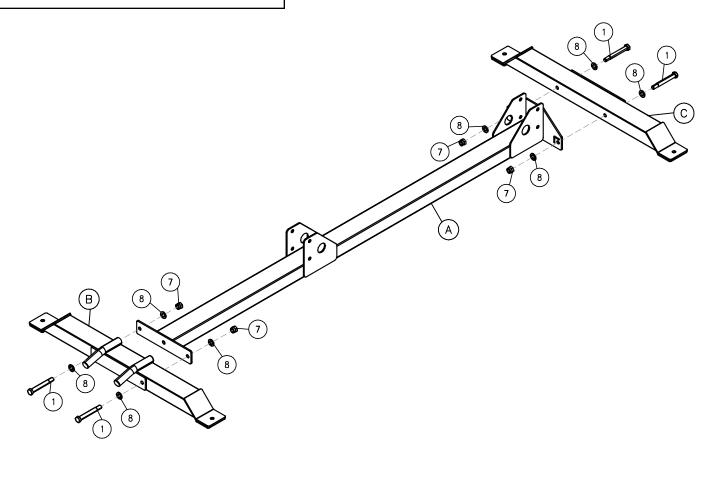


Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware in this step. DO NOT wrench tighten until the last step. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- **2A.** Attach Frame D (**D**) to Frame A (**A**) using:
 - 2 (#1) M10X100mm Hex Head Bolt
 - 4 (#8) M10 Flat Washer
 - 2 (#7) M10 Nylon Lock Nut
- **2B.** Attach E (**E**) to Frame D (**D**) using:
 - 2 (#1) M10X100mm Hex Head Bolt
 - 4 (#8) M10 Flat Washer
 - 2 (#7) M10 Nylon Lock Nut
- **2C.** Attach Frame F (**F**) to Frame A (**A**) using:
 - 2 (#1) M10X100mm Hex Head Bolt
 - 4 (#8) M10 Flat Washer
 - 2 (#7) M10 Nylon Lock Nut
- **2D.** Attach Frame E (**E**) to Frame F (**F**) using:
 - 2 (#1) M10X100mm Hex Head Bolt
 - 4 (#8) M10 Flat Washer
 - 2 (#7) M10 Nylon Lock Nut
- **2E.** Attach Step Frame (**P**) to Frame E (**F**) using:
 - 3 (#1) M10X75mm Hex Head Bolt
 - 6 (#8) M10 Flat Washer
 - 3 (#7) M10 Nylon Lock Nut

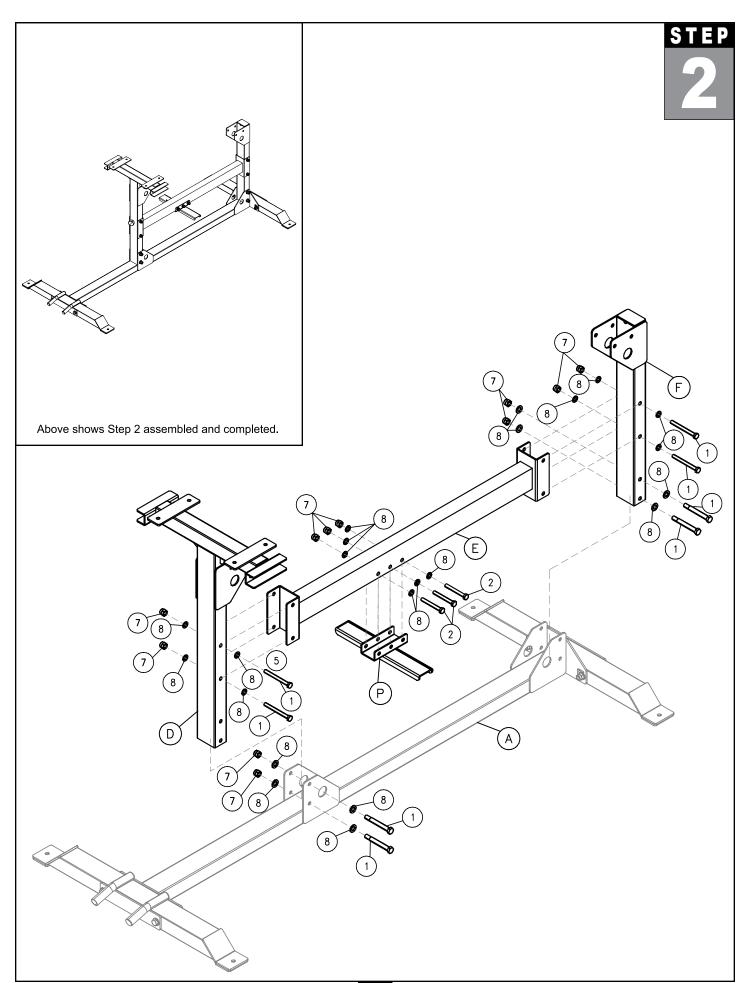


Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware first in this step. Wrench tighten ALL hardware at the end of STEP 3B. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- **3A.** Insert Frame H (**H**) onto Upper Guide Tube (**G**).
- **3B.** Attach Upper Guide Tube (**G**) to Frame D (**D**) & Frame F (**F**) using:
 - 4 (#1) M10X100mm Hex Head Bolt
 - 8 (#8) M10 Flat Washer
 - 4 (#7) M10 Nylon Lock Nut

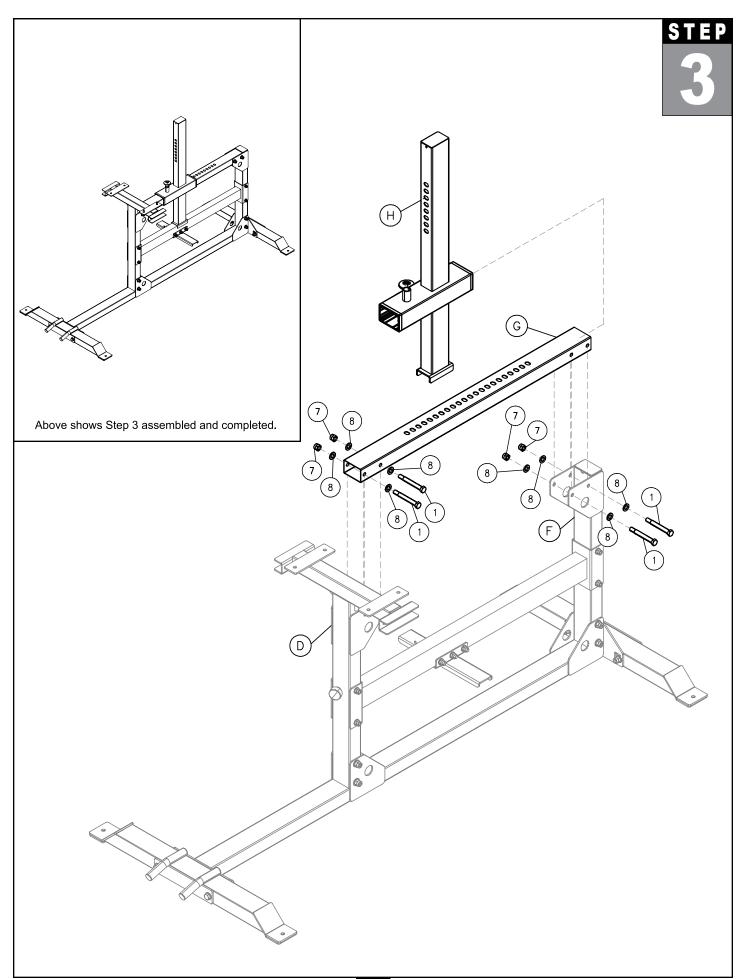


4

Be careful to assemble all components in the sequence they are presented.


NOTE:


Finger tighten all hardware first in this step. Wrench tighten ALL hardware at the end of STEP 4H. Some components may be pre-assembled. Nylon lock nuts will not fully screw onto bolts, they must be wrench tighten to fully go on.

- **4A.** Attach Handle Bars (**M&N**) to Frame D (**D**) using:
 - 4 (#4) M10X55mm Socket Head Cap Screw
 - 8 (#8) M10 Flat Washer
 - 4 (#7) M10 Nylon Lock Nut
- **4B.** Screw in two Handle Bar End Caps (#12) onto Handle Bars (M&N).
- **4C.** Attach two Knee Pads (#15) to Frame D (**D**) using:
 - 4 (#5) M8X20mm Hex Head Bolt
 - 4 (#9) M8 Flat Washer
 - 4 (#10) M8 Spring Washer
- **4D.** Insert Frame J (**J**) onto Frame H (**H**).
- **4E.** Fasten one M6X12mm Socket Head Cap Screw (**#6**) and one M6 Spring Washer (**#11**) into Frame H (**H**).
- **4F.** Insert two Steel Bars (**K**) onto Frame J (**J**).
- **4G.** Insert four Foam Rollers (**#21**), Fours End Rings (**#20**) on the Steel Bars (**K**) and screw in four End Caps (**#19**).
- **4H.** Attach Foot Plate (**L**) to Frame J (**J**) using:
 - 2 (#3) M10X50mm Hex Head Bolt
 - 4 (#8) M10 Flat Washer
 - 4 (#7) M10 Nylon Lock Nut

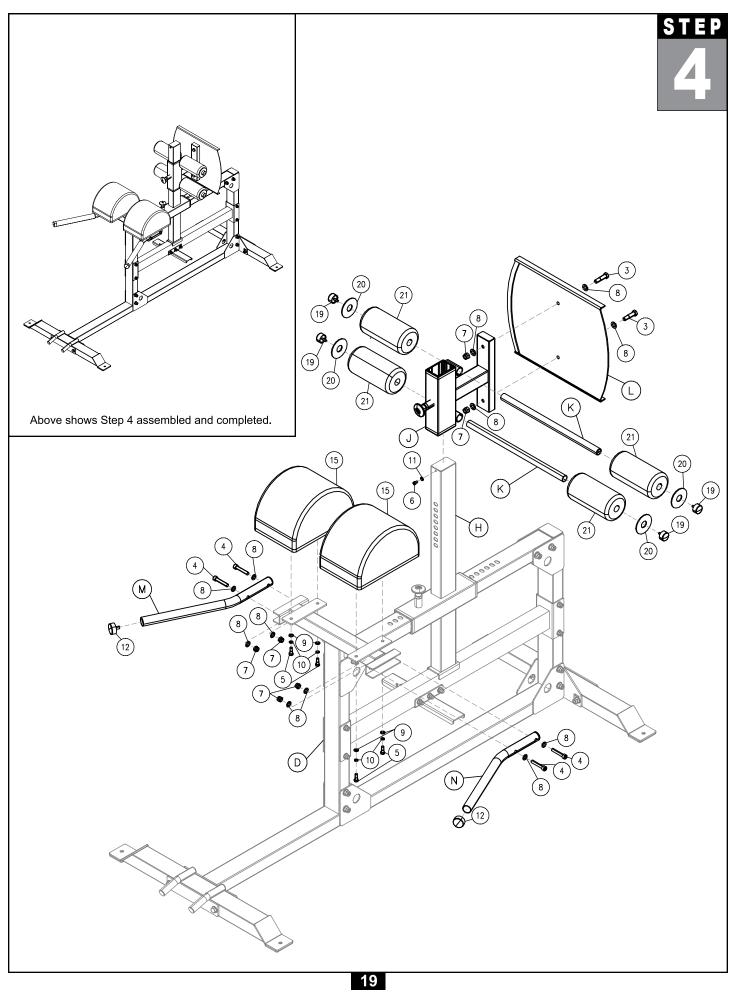

PCL Badge Location

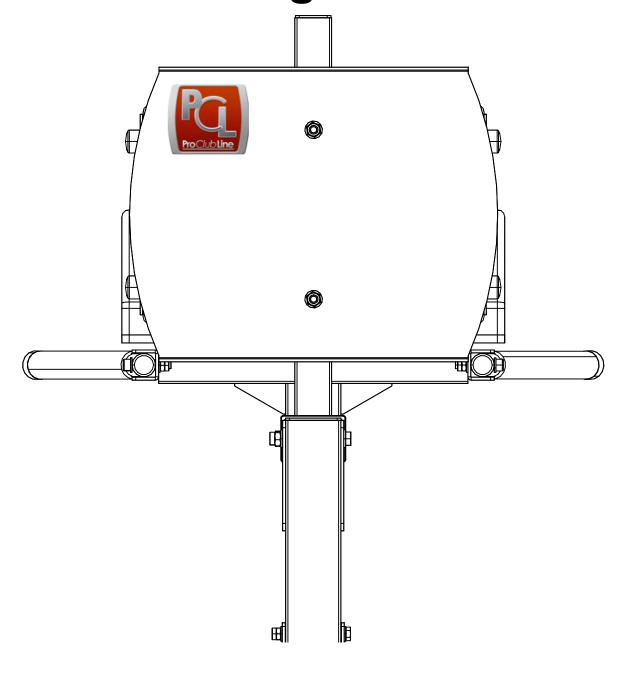

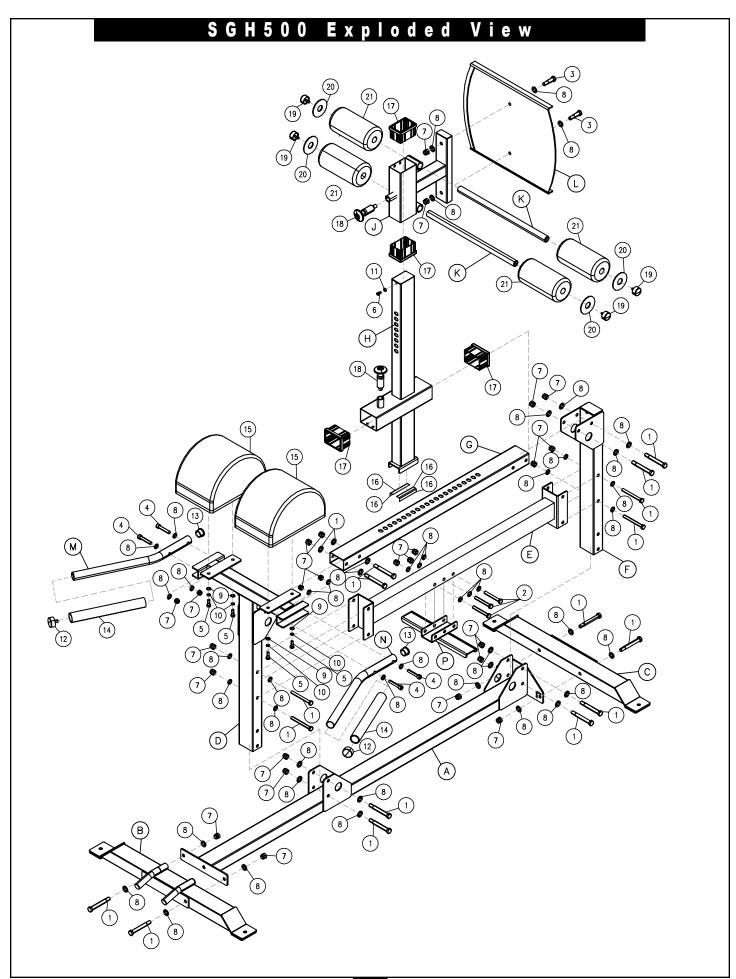



SGH500

PLEASE WRITE YOUR SERIAL NUMBER IN THE BOXES BELOW

s/n # 008267-	-	· 🗌 🔲 🔲 🗕	•
---------------	---	-----------	---

1900 S. Des Plaines Ave. Forest Park, II 60130 Phone:(708)427-3555 Fax:(708)427-3556

Hours: M-F 8:30 - 5:00 CST

www.bodysolid.com